


Cable glands DN series Assembly instruction

DWG No. IM.C – 800 / 03.01.A

Dwd / Ckd V. Perotti

Don't modify without approval

Data September 2005

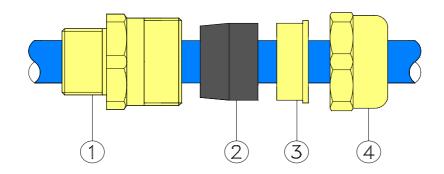

- Screw the part 1 into apparatus or secure with locknut in entry is plane hole
- Pass the cable end thug the parts 4, 3 and 2 and then through the part 1
- Screw the part 4 on part 1 and tighten up

WATCH OUT:

Light alloy cable glands: clean and grease all threads before cable glands re - assembly

Thread	* Thread type nomination															
	Size 0	*	Size 1	*	Size 2	*	Size 3	*	Size 4	*	Size 5	*	Size 6	*	Size 7	*
NPT	3/8"	N0	1/2"	N1	3/4"	N2	1"	N3	1"1/4	N4	1"1/2	N5	2"	N6	2"1/2	N5
ISO 7/1 Rc	3/8"	U0	1/2"	Ul	3/4"	U2	1"	U3	1"1/4	U4	1"1/2	U5	2"	U6	2"1/2	U5
ISO 228	3/8"	ВО	1/2"	В1	3/4"	B2	1"	В3	1"1/4	В4	1"1/2	В5	2"	В6	2"1/2	В5
ISO 261	M16	10	M20	11	M25	12	M32	13	M40	14	M50	15	M63	16	M75	15
Pg	Pg11	P0	Pg13,5	P1	Pg16	P2	Pg21	Р3	Pg29	P4	Pg36	P5	Pg42	P6	Pg48	P5